



## Product Description:

---

---

**Model:**

**Function:** Cable kit for .

For use with the following system:


Mercedes NTG3 COMAND:

- S-Class W221

## Settings:

---

---

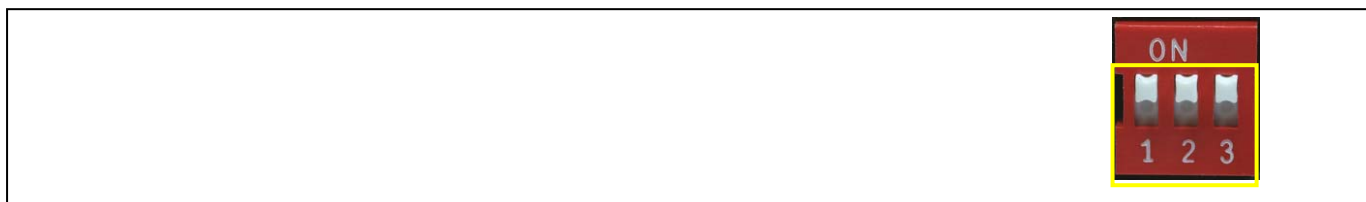

DIP-Switch setting : 1, 2, 3 in UP position.

# Installation of the Cable Kit with Interface

---

## Instructions for Mercedes W221 with NTG3 System:

**Warning:** Do not install interface while ignition is turned on.

### Connection Assignment for the Cable Kit:

Wire Colors:	Connection/Assignment:
● Black:	Ground
● Red:	+12V Permanent Plus
● Yellow/Black:	CAN HI
● Blue/Black:	CAN LOW


1. In order to install the interface directly behind the DVD unit (COMAND), the device needs to be demounted and cut from power supply.




2. Remove the stick-on cover below the drawer.




3. Open the drawer and loosen the 4 Torx-screws at the COMAND (2 on each side). Extract the COMAND and disconnect it from power supply.

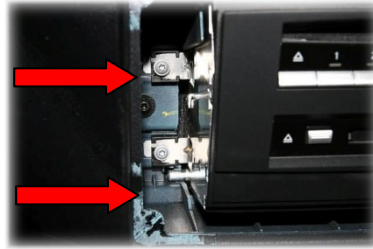


4. Remove the insert from the 20pin connector.

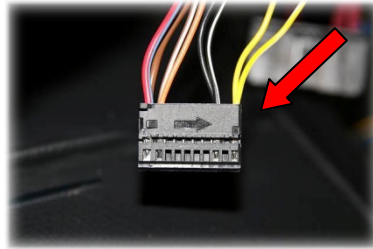


5. Remove Pin 1 (yellow/white wire, CAN-HIGH) and Pin 11 (yellow wire, CAN-LOW) from the 20pin connector and re-pin them into the supplied 3pin socket as depicted in the illustration on the right.

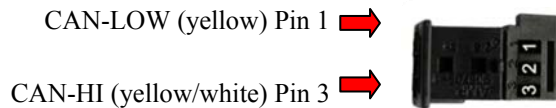

6. Connect the 3pin socket to its counterpart at the cable kit.

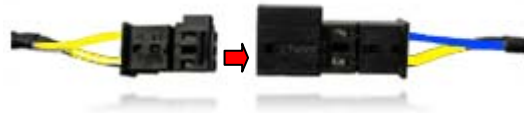

7. Pin the yellow/black wire of the cable kit into the pin1 chamber and the blue/black wire into the pin11 chamber of the 20pin connector.

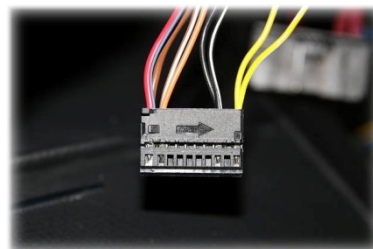

Connect the black unattached wire of the cable kit to Pin20 (Ground) and the red unattached wire to Pin10 (+12V) of the 20pin connector.

8. Re-attach the system to the center console.

**Please note, that the function is activated permanently.**